



## Care and Maintenance Guide

Congratulations on the purchase of your new Mirostone® worktops. Please take time to read through the information below and if you have any queries, please don't hesitate to contact your Mirostone supplier or feel free to visit our website [www.mirostone.com.au](http://www.mirostone.com.au)

### **\*\*Before First Use\*\***

Be sure to give your worktops a once over with 'Selleys Sugarsoap' which will assist in eliminating any residue left by the protective sheet which is removed during the installation of your worktops. This can be purchased from all leading hardware stores.

### **Everyday Cleaning and General Care**

Mirostone® is a non-porous surface meaning that it is water and stain resistant. If you do spill something on your surface we recommend wiping the worktops with warm soapy water a damp cloth. Please do not use an abrasive cleaner such as Spray and Wipe or Jiff as they may scratch and/or dull your Mirostone worktops.

In addition, Selleys Sugarsoap Everyday Wall & Surface Cleaning Wipes are specially formulated to remove the most stubborn stains on your tops.

Whilst Mirostone® is tough, it is not indestructible. Use of the product outside of the guidelines referred to in the installation guide can cause unnecessary damage. We always recommend using a cutting board when preparing food and never cutting directly on the Mirostone® surface to avoid blunting kitchen knives or damaging the surface of your bench top.

### **Heat Resistance**

Mirostone® is heat resistant, however like most solid surface worktop materials Mirostone® can be damaged by sudden and rapid surface temperature changes. We always recommend placing hot pots, oven trays and fry pans onto a wooden chopping board or similar object to absorb the heat. We also recommend that electric fry pans and slow cookers are also used on a similar object and not directly on the worktop as these can also produce extremely high levels of heat.

[www.mirostone.com.au](http://www.mirostone.com.au)